
Tritex® TTX Series Product Catalog









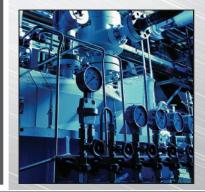

Tritex®TTX Series

Intelligent Servo Drive/Motor/Actuator

By combining the latest electronic power technology with advanced thermal management modeling technology, Exlar® has set a new benchmark for electric actuator performance versus size. TTX Series actuators now integrate an AC or DC powered servo drive, digital position controller, brushless motor and linear actuator in one elegant, compact, sealed package. Now you can distribute motion control and resolve your application challenges with one integrated device. Simply connect power, I/O, communications and go!

Reduce Panel Space

TTX Series actuators are the highest power density, smallest footprint servo drive devices on the market. Finally, you can incorporate a fully electronic solution in the space of your existing hydraulic or pneumatic cylinder. You can also eliminate troublesome ball screw actuators; and the space previously consumed by panel mount servo drives and motion controllers is no longer needed. TTX Series actuators may also reduce the size of your machine design while significantly improving reliability.

Reduce Costs

Now you can eliminate the labor costs for mounting and wiring panels because the TTX Series houses the servo drive, digital positioner, and actuator in one convenient package. Cable costs are also significantly reduced by eliminating the need for expensive, high-maintenance specialty servo cables. All that is required is an economical standard AC or DC power cord, and standard communication cable for digital and analog I/O.


These actuators also eliminate the issues associated with power signals and feedback signals traveling long distances from servo drive to servo motor. With the TTX Series, the servo drive and motor are always integrated in the same housing.

Flexible Communications


Digital and analog I/O, plus popular communication networks, such as Modbus TCP, Modbus RTU (standard), EtherNet/IP, and PROFINET IO, allow the TTX Series to become an integral part of your control architecture or machine control processes.

Improves Power, Performance, and Reliability

TTX Series actuators give you unrivaled power, performance, and reliability. No longer are you limited to trivial amounts of force or speeds so slow that many motion applications are not possible.

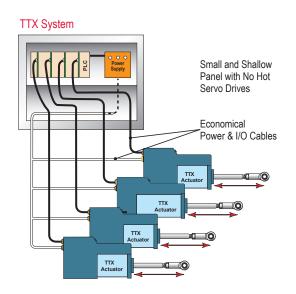

Alternative Systems

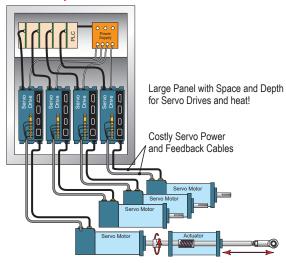

Linear Applications

TTX Series linear actuators employ a superior inverted roller screw mechanism for converting rotary motion to highly robust and long-life linear motion. These characteristics enable the TTX Series actuator to solve applications that previously required pneumatic or hydraulic cylinders. No additional mechanisms (such as acme or ball screws) are necessary to convert the actuator's rotary power into linear motion in order to move the load.

The simple to configure, yet robust interface software allows either the AC or DC TTX Series actuators to perform nearly any motion control application. The TTX Series linear actuator can be programmed to follow an analog command signal, making it ideal for numerous factory automation applications

Tritex TTX Series Models

TTX Series AC and DC Models

• TTX Series high mechanical capacity actuator

Feedback Type

Absolute Feedback (analog hall with multi-turn, battery backup)

Option Boards and I/O

Standard I/O:

- 8 Digital Inputs
- 8 Digital Outputs
- 1 ±10 V Analog Input
- 1 0-10 V Analog Output

EtherNet/IP - Includes all standard I/O

- Modbus TCP Includes all standard I/O
- PROFINET I/O Includes all standard I/O

4-20 mA - 4 digital inputs, 3 digital outputs, Isolated 4-20 mA input, Isolated 4-20 mA output

Standard Communications (All Models):

 1 RS485 port, Modbus RTU, opto-isolated for programming, controlling and monitoring

TTX Series Option Boards

- Option boards offer adding functionality to the base TTX Series actuators
- Terminal board for customer I/O
- Isolated 4-20 mA analog input and output
- Communication buses
 - EtherNet/IP
 - Modbus TCP
 - PROFINET IO

Connectivity

- · Internal terminals accessible through removable cover
- M23 Power Connector (DC & AC Models differ)
- M23 I/O
- M8 connector for RS485 (may use internal connection instead)
- M12 connector for Ethernet options (may use internal connection instead)
- Power and I/O connectors may be removed by customer for M25 threaded port
- Power and I/O connectors may be replaced by customer with cable glands
- Power and I/O connectors may be replaced by customer with 1/2 inch NPT adaptors



Tritex TTX Series Operation

The TTX Series actuators can operate in one of five different motion-producing modes. These modes solve an endless variety of applications in industrial automation, medical equipment, fastening and joining, blow molding, injection molding, testing, food processing, and more.

Programmed functions are stored in the TTX Series non-volatile memory. A standard RS485 serial interface allows control, programming, and monitoring of all aspects of the motor or actuator as it performs your application. Optional communications protocols are available.

Operating Modes

1. Move to a position (or switch)

The TTX Series actuators allow you to execute up to 16 programmed positions or distances. You may also use a limit switch or other input device as the end condition of a move. This combination of index flexibility provides a simple solution for point-to-point indexing.

2. Move to a preset force

The TTX Series allows you to terminate your move upon the achievement of a programmed torque or force. This is an ideal mode for pressing and clamping applications.

- 3. Position proportional to an analog signal Ideal for process control solutions, the TTX Series provides the functionality to position a control valve by following an analog input signal. Therefore, it delivers precise valve control — which can be challenging with other electric, hydraulic, or pneumatic actuators.
- Velocity proportional to an analog signal TTX Series actuators offer you the capability to control velocity with an analog signal.
- 5. Force proportional to analog signal Perfect for pressing applications, you can control force with an analog input while in force mode.

Selectable Input Functions

- Enable Execute Move (0-15) Dedicated Position Jog+
- Jog- Jog Fast Home Extend Switch Retract Switch
- Home Switch Teach Enable Teach Move (1-16)
- Select Move Stop Hold Reset Faults
- Alternate Mode (allows you to switch between 2 operating modes)

Selectable Output Functions

- Enabled Homed Ready (Enabled and Homed)
- Fault Warning Fault or Warning Active
- Move (0-15) in Progress · Homing · Jogging
- Jogging+ Jogging- Motion In Position
- At Home Position At Move (0-15) Position
- Stopped
 Holding
 In Current Limit
 In Current Fold Back
- Above Rated Current Home



Expert User Interface

Expert, the TTX user interface software, provides you with a simple way to select all aspects of configuration and control required to set up and operate a TTX Series actuator. Easy-to-use tabbed pages provide access to input all of the parameters necessary to successfully configure your motion application. 'Application' files give you a convenient way to store and redistribute configurations amongst multiple computers, and 'Drive' files allow the same configuration to be distributed to multiple TTX Series actuators. Motion setup, homing, teach mode, tuning parameters, jogging, I/O configurations, and local control are all accomplished with ease using Expert software.

Protocol Options

The standard communication protocol for Tritex is an RS485 connection using Modbus RTU. The Modbus protocol provides a simple and robust method to connect industrial electronic devices on the same network. The Expert software acts as a Modbus Master and the TTX Series acts as the follower device, only responding to requests commanded through the software. The Expert software allows full access to commissioning, configuring, monitoring, and controlling the TTX Series.

In addition, the following protocol options are available by selecting the communication option boards. Initial commissioning of a TTX Series actuator must be performed with the Modbus RTU protocol.

Modbus TCP

Modbus TCP couples Modbus communication structure from Modbus RTU with Ethernet connectivity. The Modbus TCP option is fully supported by the Expert software and offers seamless commissioning, configuring, monitoring and controlling the Tritex II. Communication protocol DSP 301 is supported as well as DSP 402 supporting Profile Torque, Profile Velocity, Profile Position and Homing. Setup on the system is most easily achieved with the Expert software using the RS485 port. A Modbus mapping table allows you to map all of the parameters you wish to read and modify into a register bank of up to 100 registers. This allows a PLC program to perform a single read operation and a single write operation to all the parameters.


EtherNet/IP

EtherNet/IP allows you to change, monitor, and control the TTX through implicit or explicit messaging initiated from your Rockwell PLC. Tritex parameters are set up through the Expert software using a TTX Series parameter to EtherNet/IP parameter mapping table. Up to 100 input, and 100 output 16 bit registers can be mapped to TTX Series parameters.

PROFINET IO

PROFINET IO allows you to change, monitor and control the TTX Series from your PROFINET enabled PLC. Tritex parameters are set up through the Expert software using a TTX Series parameter to PROFINET IO parameter mapping table. Up to 100 input and 100 output, 16 bit registers can be mapped to TTX Series parameters.

Modbus Mapping Screen

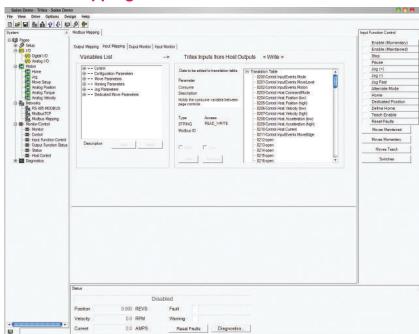



Motion Setup

Exlar configuration provides several templates for various applications. These can serve as your configuration, or as a starting point for your configuration. You can also begin by selecting configuration details specific to your application. At the click of a button, you can configure a move to position, move to switch, or move to force motion. TTX Series products offer absolute and incremental motion, as well as moves ending on a condition, such as a specific force or torque.

Control Page

The Expert control page gives you the ability to initiate all motion functions from one simple screen. This screen provides you with very easy system start-up and testing, without all the inconvenience of machine wiring.

The control page offers the capability to enable and disable the drive, and perform fast and slow jogs. This gives you the ability to verify motion, before needing any I/O wiring.

Monitoring and Diagnostics

All input functions can be monitored and activated from the Expert monitor page, and all output functions can be monitored. Critical fault and status data is available as a separate page as well as a fixed window on the bottom of each page of the software.


Configuring I/O

A drop down menu allows all I/O to be set up in a matter of minutes. Inputs can be configured to be maintained or momentary, depending on the application requirements. Input and output logic can be inverted with a single click.

Scope

The Expert Software includes a four-channel digital oscilloscope feature.

Ethernet IP Mapping Screen

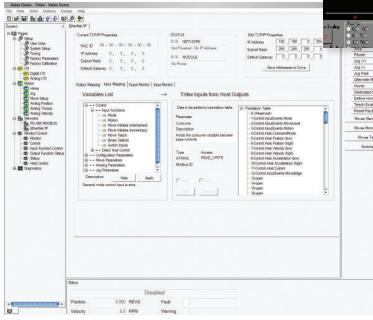

You can select up to four Tritex drive parameters to be monitored simultaneously.

For high speed requirements, the data can be captured in the drive's memory at an adjustable rate, down to 100 micro seconds, and then uploaded for plotting. The plots can be saved or printed, and the captured data can be saved as a comma separated file for further analysis with third party spreadsheets.

Homing


You can home to an input, by using a proximity or limit switch, or home to a specific force or torque.


Homing to a force or torque is ideal for setting up applications that require motion referenced to a hard stop, like the closed position of a valve, or the final position of a press.

Teach Mode

In this mode, you can jog the actuator to the desired position, and activate an input. Alternatively, you can click a button in the Expert software and the current position of the actuator becomes the defined distance or absolute position associated with a particular move command.

Scope

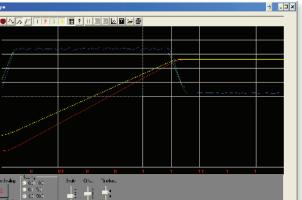





Application Flexibility

TTX Series actuators outperform other electric, hydraulic and pneumatic actuators by providing small hysteresis and dead band, quick response to small signal changes, and stable dynamic responses. Fully programmable to follow an analog or digital signal representing either position or force, the TTX Series linear actuator is well suited for many applications with thrust requirements up to 4404 N.

Additionally, TTX Series actuators can be mounted on any valve from any manufacturer giving you maximum flexibility.

Tritex TTX Benefits

Extreme Accuracy

Exlar actuators do not rely on air or oil pressure to move. Each move can be programmed resulting in accuracy and repeatability better than 0.1%.

100% Duty Cycle

The design of the Tritex TTX allows for reliable, long life (15x similar sized ballscrew actuators) at 100% duty cycle operation due to an integrated inverted roller screw, a high-torque servo motor, and a decentralized servo drive into a compact, power-dense package.

Built in Positioner

TTX Series actuators include a built in positioner with a 4-20 mA or digital signal to tell you the exact stroke position. An analog output is also available.

Flexibility

These actuators include digital I/O and analog control. This provides the user with options for additional control such as emergency stop, +/- jog, or various diagnostic conditions.

Low Power Consumption

The TTX Series actuator only uses the current needed for a given force. This extreme efficiency makes it suitable for use with solar panels and batteries.

Fast Response and Stroke Speeds

Most other electric actuators are known for being slow—a major disadvantage. TTX Series response rate is measured in milliseconds. Stoke speeds can be up to 762 mm/s.

Hydraulic Replacement

Tritex actuators have comparable capabilities as hydraulic cylinders but without the cost or maintenance issues. High force, fast speeds, and precise movements make it a superior substitute for traditional hydraulic applications.

Absolute Feedback

The absolute feedback option gives the actuator memory after teaching the motion limits. So upon power loss, the battery backup will maintain the motion limits.

Diagnostics

All inputs and outputs can be monitored including position, temperature, current, and many more. An oscilloscope feature allows you to select up to four parameters to be monitored simultaneously. The data can be captured in the drive's memory at an adjustable rate, down to 100 microsecond, and then uploaded for plotting.

								Actuator Direction
								Extend to Close
								Open Value Open Value Open Value Open Value Value Status Parameters when value is Conset Parameters when value is Conset The fact value is scale another is the taget will be the difference factware the Conset Value 4.000 mA To 500 mA To 500 mA Person 0.000 REVS 0.000 REVS Note The Open Value Position.
								Velocity Acceleration Velocy Linit 1055 (ppu Acceleration Linit 3005 (PpM)5
lowerUp 69 Te	ne 19.0e HRS							Monuel Teech Controls Digital (Jog Mode
Last Fault/Warning				Reed	ant Fault He	shany		Ing to Object Decision Setting Current Ing to Object Objec
Fault Name	Count P	aver-Up 1	ime (HRS)	P	gU-rewo	Time [HRS]	Fault Name	Jog to Closed Position Jog to Open Position
Peak Current	0	D	0.CD	1	67	19.00	Communications	Teach Closed Position Teach Open Position
Continuous Current	6	49	0.49	2	96	17.23	Communications	
Poston Tracking	34	90	18.92	3	56	15.58	Communications	
Loe Bus Vollage	0		0.00	4	56	13.92	Emmerications	Valve Seating
High Bus Voltage	1	14	0.00	5	55	12.45	Communications	Close Valve Open Valve
Following Error	្ន	05	11.63	6	05	11.03	Following Error	Trevel Cut-off Position 0.00 % Trevel Cut-off Position 100.00 %
loard Temperature	0	<u></u>	8.00	2	95	11.68	Communications	□ Enable valve seating at Closed position □ Enable valve seating at Open position
Communications	10	57	19.00	8	50		Pestor Tracking	
Actuator Temperature	0	0	8.00	9	58		Postor Tecking	Seating Limits Seating Velocity 18.0 RPM
AbsHallBattery	0	6	0.00	10	56		Position Tracking	Peak Seating Current 20 AMPS
Loss of Signal	0	0	0.00	10	10	ie ce	Townse franking	Foldback Seating Carrent 20 AMPS
Hardware Durrent Trip	0		8.00	Maxi	num Stress	Values		rowak debig careix
Hardwate Luttent Trip	U	9	a.co					
Dear Bun Time	Euterst Power-Dn Stress V	alues			nani		20.5 AMPS	
					liago	1	14.72 VOLTS	
	Eurenk	0.0		Bo	aid Tenp		52.5 DEG(C)	
	Voltage	23.91		AL	luato: Ten	0	D.D DEGIC	



TTX Series Agency Approval

Shown below are additional agency approvals applied to TTX Series Actuators.

Agency Standards & Approvals						
		TTX-AC Models	TTX-DC Models			
UL		UL 1004-1	N/A			
		UL 1004-3				
		UL 1004-6				
		UL 508C (TTX AC)				
CSA		CSA C22.2 NO. 77	N/A			
		CSA C22.2 NO. 100				
		CSA C22.2 NO. 274 (PCB)				
CE	EMC	EN 61800-3:2004+A1:2012 Part 3	EN 61800-3			
	Safety	EN 61800-5-1	N/A			
	RoHS	RoHS 2011/65/EU	RoHS 2011/65/EU			
UKCA		EN 61800-3:2004+A1:2012 Part 3	EN 61800-3:2004+A1:2012 Part 3			
Vibration	Qual. Test Only	2.5 grms; 5 to 500 Hz	5.0 grms; 5 to 500 Hz			
ODVA		EtherNet/IP	EtherNet/IP			
PROFINET		PI Tested for PROFINET IO	PI Tested for PROFINET IO			



TTX Series (AC Power)

No Compromising on Power, Performance or Reliability

With forces up to 5,897 N (1,326 lbf) continuous and and speeds to 635 mm/s (25 in/s), the AC TTX Series linear actuators also offer a benefit that no other integrated product offers: POWER! No longer are you limited to trivial amounts of force, or speeds so slow that many motion applications are not possible. The TTX Series with AC power electronics operates with maximum reliability over a broad range of ambient temperatures: 0 °C to +65 °C. The AC powered TTX Series actuators contain a 1.5 kW servo amplifier and a very capable motion controller. With standard features such as analog following for position, compound moves, move chaining, and individual force/torque control for each move, the TTX Series is the ideal solution for most motion applications.

TTX Series Models

TTX Series high mechanical capacity actuator, 80 mm

Power Requirements

- AC Power 100-200 Vac, ±10%, single phase
- · Built-in AC line filter
- · Connections for external braking resistor

Feedback

· Absolute Feedback (analog hall with multi-turn, battery backup)

Connectivity

- · Internal terminals acessible through removable cover
- M23 connectors
- M8 connector for RS485
- · M12 connector for Ethernet options



TTX Series (DC Power)

Linear Actuators

No Compromising on Power, Performance or Reliability With forces up to 4,970 N (1,117 lbf) continuous and speeds up to 508 mm/s (20 in/s). The DC TTX Series linear actuators also offer a benefit that no other integrated product offers: POWER! No longer are you limited to trivial amounts of force, or speeds so slow that many motion applications are not possible. The new TTX Series with DC power electronics operates with maximum reliability over a large temperature range: 0 °C to +65 °C. The DC powered TTX Series actuators contain a 750 W servo amplifier and a very capable motion controller. With standard features such as analog following for position, compound moves, move chaining, and individual force/ torque control for each move, the TTX Series is the ideal solution for most motion applications.

TTX Series Models

• TTX Series high mechanical capacity actuator, 80 mm

Power Requirements

- DC Power 12-48 Vdc nominal
- · Connections for external braking resistor

Feedback

• Absolute Feedback (analog hall with multi-turn, battery backup)

Connectivity

- · Internal terminals accessible through removable cover
- M23 connectors
- M8 connector for RS485
- M12 connector for Ethernet options

Operating Conditions and Usage for AC and DC Units						
Accuracy:						
Screw Lead Error	µm/300 mm	25				
	in/ft	0.001				
Screw Travel Variation	µm / 300 mm	30				
	in/ft	0.0012				
Screw Lead Backlash	0.1524 mm Maximum 0.006 in Maximum					
IP Rating		IP66S				
Standard Ambient Temperature*	°C	0 to 65				
	°F	32 to 149				
Friction Torque (typical)	Frame Size (Nm)	060 (0.12) 080 (0.23)				





Communications & I/O

All models include digital IO and an isolated RS485 communication port. Digital I/O is isolated from other channels as a group, with all channels referenced to the negative side of the I/O supply.

The IO count and type vary with the actuator model and option module selected.

TTX AC and DC I/O

	SIO, EIP, PIO, TCP	IA4
Digital inputs	8	4
Digital outputs	4	3
Analog input, voltage	1	0
Analog output, voltage	1	0
Analog input 4-20 mA	0	1
Analog output 4-20 mA	0	1

Digital Inputs:

10 to 30 Vdc Opto-isolated but common return

Digital Outputs:

30 Vdc maximum Opto-isolated but common supply & return 100 mA continuous output Isolated

SIO

Analog Input (Voltage):

±10 Vdc Range 13 bit resolution over full range May be assigned to control Position, Velocity, Torque, or Velocity Override.

Analog Output (Voltage):

0 -10 Vdc Range11 bit resolution over full rangeMay be assigned to monitor one of many internal parametes.

IA4

Analog Input (4-20 mA): 16 bit resolution Isolated Assignable to Position, Velocity, or Torque command


Analog Output (4-20 mA):

12 bit resolution Assignable to Position, Velocity, Current, Temperature, etc

Standard Communications:

1 RS485 port opto-isolated, for programming, controlling and monitoring. Uses Modbus RTU protocol



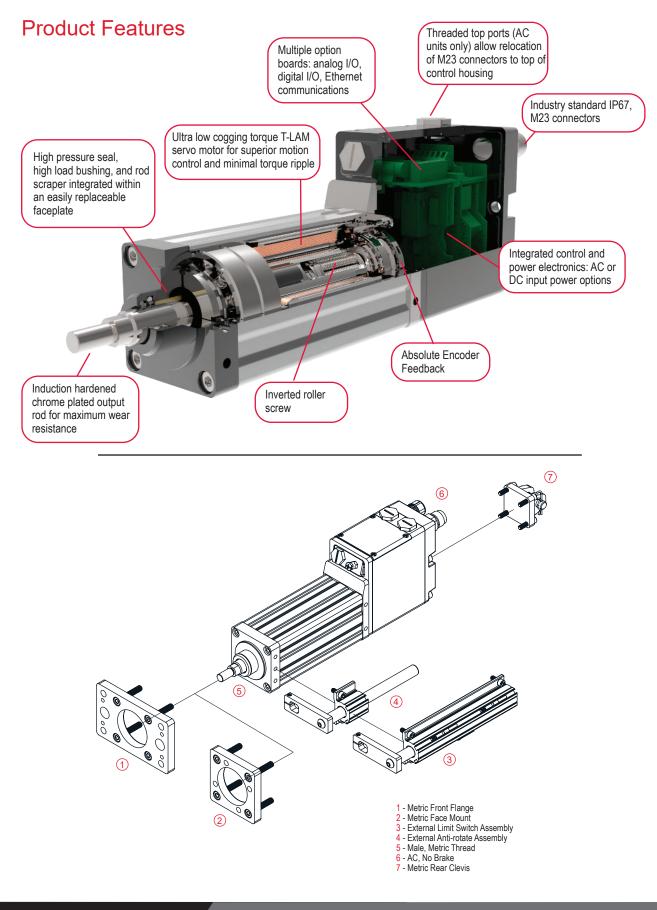



Tritex TTX Mechanical Specifications

TTX060

	Stroke	Screw Lead	Continuous Force Rating N (lbf)	Peak Force Rating N (lbf)	Max Velocity mm/s (in/s)	Dynamic Load Rating	Armature Inertia kg-m^2	Maximum Continuous Input Current
	mm (in)	mm (in)	D (Vdc)	D (Vdc)	D (Vdc)	N (lbf)	(in-lb-s^2)	D (Vdc) Arms
TTX060-080-01		2.54 (0.1)	2,566 (577)	4,618 (1,038)	202 (8.3)	9,230 (2,075)		
TTX060-080-02	80 (3.15)	5.08 (0.2)	1,363 (306)	2,454 (552)	423 (16.7)	6,850 (1,540)	0.00007367 (0.000652)	
TTX060-080-04		10.16 (0.4)	722 (162)	1,299 (292)	847 (33.3)	5,471 (1,230)		
TTX060-150-01		2.54 (0.1)	2,566 (577)	4,618 (1,038)	202 (8.3)	9,230 (2,075)		
TTX060-150-02	150 (5.9)	5.08 (0.2)	1,363 (306)	2,454 (552)	423 (16.7)	6,850 (1,540)	0.00008689 (0.000769)	18.0
TTX060-150-04		10.16 (0.4)	722 (162)	1,299 (292)	847 (33.3)	5,471 (1,230)		
TTX060-300-01		2.54 (0.1)	2,566 (577)	4,618 (1,038)	202 (8.3)	9,230 (2,075)		
TTX060-300-02	300 (11.8)	5.08 (0.2)	1,363 (306)	2,454 (552)	423 (16.7)	6,850 (1,540)	0.00011537 (0.001021)	
TTX060-300-04		10.16 (0.4)	722 (162)	1,299 (292)	847 (33.3)	5,471 (1,230)		

Specifications subject to change without notice. Test data derived using NEMA recommended aluminum heatsink 10" x 10" x 3/8" at 25 °C ambient.

Maximum velocities listed at maximum voltages



TTX080

		Screw	Continuo Rating		Peak Ford N (I			elocity (in/s)	Dynamic Load	Armature		Continuous Current
	Stroke mm (in)	Lead mm (in)	4 (Vac)	D (Vdc)	4 (Vac)	D (Vdc)	4 (Vac)	D (Vdc)	Rating N (lbf)	Inertia kg-m^2 (in-lb-s^2)	A (Vac) Arms	D (Vdc) Arms
TTX080-100-01		2.54 (0.1)	5,897 (1,326)	4,970 (1,117)	11,794 (2,651)	8,946 (2,011)	127 (5.0)	102 (4.0)	24,535 (5,516)			
TTX080-100-02	100 (3.9)	5.08 (0.2)	3,342 (751)	2,816 (633)	6,683 (1,502)	5,069 (1,140)	254 (10.0)	203 (8.0)	25,798 (5,800)	0.000340 (0.003013)		
TTX080-100-05		12.7 (0.5)	1,415 (318)	1,193 (268)	2,830 (636)	2,147 (483)	635 (25.0)	508 (20.0)	21,795 (4,900)			18.0
TTX080-150-01		2.54 (0.1)	5,897 (1,326)	4,970 (1,117)	11,794 (2,651)	8,946 (2,011)	127 (5.0)	102 (4.0)	24,535 (5,516)	0.000369 (0.003267)		
TTX080-150-02	150 (5.9)	5.08 (0.2)	3,342 (751)	2,816 (633)	6,683 (1,502)	5,069 (1,140)	254 (10.0)	203 (8.0)	25,798 (5,800)			
TTX080-150-05		12.7 (0.5)	1,415 (318)	1,193 (268)	2,830 (636)	2,147 (483)	635 (25.0)	508 (20.0)	21,795 (4,900)			
TTX080-300-01		2.54 (0.1)	5,897 (1,326)	4,970 (1,117)	11,794 (2,651)	8,946 (2,011)	127 (5.0)	102 (4.0)	24,535 (5,516)			
TTX080-300-02	300 (11.8)	5.08 (0.2)	3,342 (751)	2,816 (633)	6,683 (1,502)	5,069 (1,140)	254 (10.0)	203 (8.0)	25,798 (5,800)	0.000455 (0.004029)		
TTX080-300-05		12.7 (0.5)	1,415 (318)	1,193 (268)	2,830 (636)	2,147 (483)	635 (25.0)	508 (20.0)	21,795 (4,900)			
TTX080-450-01		2.54 (0.1)	5,897 (1,326)	4,970 (1,117)	11,794 (2,651)	8,946 (2,011)	127 (5.0)	102 (4.0)	24,535 (5,516)			
TTX080-450-02	450 (17.7)	5.08 (0.2)	3,342 (751)	2,816 (633)	6,683 (1,502)	5,069 (1,140)	254 (10.0)	203 (8.0)	25,798 (5,800)	0.000541 (0.004790)		
TTX080-450-05		12.7 (0.5)	1,415 (318)	1,193 (268)	2,830 (636)	2,147 (483)	635 (25.0)	508 (20.0)	21,795 (4,900)			

Specifications subject to change without notice. Test data derived using NEMA recommended aluminum heatsink 10" x 10" x 3/8" at 25 °C ambient. Maximum velocities listed at maximum voltages



Tritex TTX Weights

TTX060

Description	Weight kg (lb)
TTX060-080	2.32 (5.11)
TTX060-150	2.82 (6.2)
TTX060-300	3.88 (8.54)
Brake Adder	0.65 (1.42)
Front Flange (1)	0.4 (0.89)
Tapped Face (3)	0.25 (.54)
Rear Clevis (5)	0.21 (0.46)
Imperial Flange (F)	0.3 (0.67)
Imperial Clevis (C)	0.33 (0.72)
Anti Rotate (80 mm stroke)	0.46 (1.0)
Anti Rotate (150 mm stroke)	0.54 (1.2)
Anti Rotate (300 mm stroke)	0.72 (1.6)
Limit Switch Assembly (80 mm stroke)	0.67 (1.5)
Limit Switch Assembly (150 mm stroke)	0.81 (1.8)
Limit Switch Assembly (300 mm stroke)	1.11 (2.5)

TTX080

Description	Weight kg (lb)
TTX080-100	5.5 (12.2)
TTX080-150	6.2 (13.5)
TTX080-300	8.0 (17.6)
TTX080-450	9.8 (21.6)
Brake Adder	1.1 (2.5)
Front Flange (1)	1.0 (2.2)
Tapped Face (3)	0.6 (1.2)
Rear Clevis (5)	0.4 (0.8)
Imperial Flange (F)	0.8 (1.8)
Imperial Clevis (C)	0.8 (1.7)
Anti Rotate (100 mm stroke)	0.5 (1.1)
Anti Rotate (150 mm stroke)	0.6 (1.3)
Anti Rotate (300 mm stroke)	0.8 (1.8)
Anti Rotate (450 mm stroke)	1.1 (2.4)
Limit Switch Assembly (100 mm stroke)	0.9 (1.9)
Limit Switch Assembly (150 mm stroke)	1.0 (2.3)
Limit Switch Assembly (300 mm stroke)	1.6 (3.5)
Limit Switch Assembly (450 mm stroke)	2.1 (4.7)

TTX060 Brake Specifications						
Proko Holding Torque (minimum)	Nm	2.5				
Brake Holding Torque (minimum)	lbf-in	22				
Brake Voltage	Vdc	24 (-10%/+6%)				
Nominal Brake Current at 24 Vdc	А	0.46				
Brake Engage/Disengage Time (typical)	ms	10/25				

TTX080 Brake Specifications						
Proko Holding Torque (minimum)	Nm	4.5				
Brake Holding Torque (minimum)	lbf-in	40				
Brake Voltage	Vdc	24 (-10%/+6%)				
Nominal Brake Current at 24 Vdc	А	0.5				
Brake Engage/Disengage Time (typical)	ms	18/35				




Tritex TTX Options

Internal Holding Brake

This option provides an internal holding brake. The brake is spring activated and electrically released.

External Anti-rotate Assembly

This option allows external limit switches to be mounted to the TTX Series Actuator. Anti-rotation is required for operation. These switches provide travel indication to the controller and are adjustable (Limit switches sold separately).

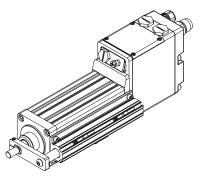

The external limit switch accessory for the TTX Series of linear actuators allows the user to externally mount adjustable switches for use as the end of travel limit switches or home position sensors.


(Limit switches sold separately from actuator)

NOTE: Accessory option "L" required in model mask to order


Switch Type	Exlar Part Number	Turck Part Number
Normally Closed Switch, PNP	43404	BIM-UNT-RP6X
Normally Open Switch, PNP	43403	BIM-UNT-AP6X
Normally Closed Switch, NPN	67635	BIM-UNT-RN6X
Normally Open Switch, NPN	67634	BIM-UNT-AN6X




Tritex TTX L10 Estimated Service Life

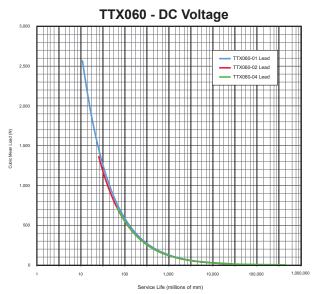

TTX080- AC Voltage

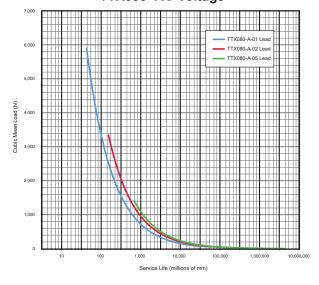

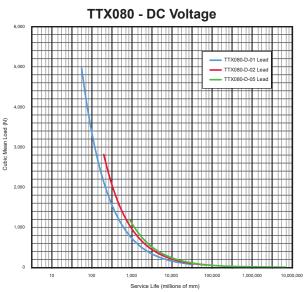

Service Life Estimate Assumptions:

- Sufficient quality and quantity of lubrication is maintained throughout service life (please refer to the engineering reference section for lubrication interval estimates.)
- Bearing and screw temperature between 20 °C and 40 °C
- · No mechanical hard stops (external or internal) or impact loads
- No external side loads
- Does not apply to short stroke, high frequency applications such as fatigue testing or short stroke, high force applications such as pressing. (For information on calculating estimating life for unique applications please refer to the engineering reference section.)

The L₁₀ expected life of a roller screw linear actuator is expressed as the linear travel distance that 90% of properly maintained roller screws are expected to meet or exceed. For higher than 90% reliability, the result should be multiplied by the following factors: 95% x 0.62; 96% x 0.53; 97% x 0.44; 98% x 0.33; 99% x 0.21. This is not a guarantee; these charts should be used for estimation purposes only. The underlying formula that defines this value is:

Travel life in millions of inches, where: C₂= Dynamic load rating (lbf)

 F_{cml} = Cubic mean applied load (lbf)

 ℓ = Roller screw lead (inches)

For additional details on calculating estimated service life, please refer www.exlar.com.



 $L_{10} = \left(\begin{array}{c} C_{a} \\ F_{cml} \end{array}\right)^{3} \times \ell$


Speed vs. Force Curves

Temperature Derating


The speed/torque curves are based on 25 $^{\circ}$ C ambient conditions. The actuators may be operated at ambient temperatures up to 85 $^{\circ}$ C.




$$100\% \times \sqrt{\frac{\text{Max Rated Temp [~130 °C] - Environment Temp [in °C]}{\text{Max Rated Temp [~130 °C] - Rated Ambient [~25 °C]}}} =$$




TTX060 DC Voltage

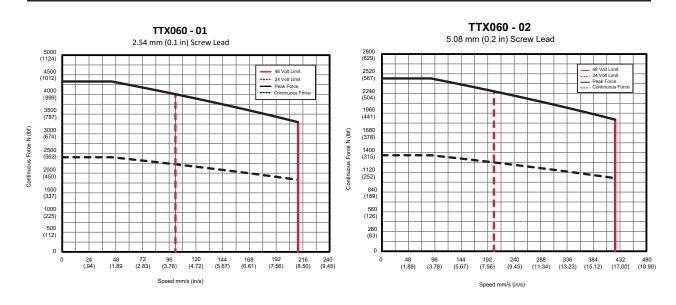

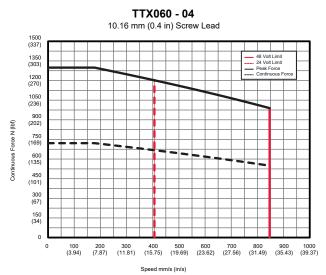

TTX080 - AC Voltage


TTX080 - DC Voltage

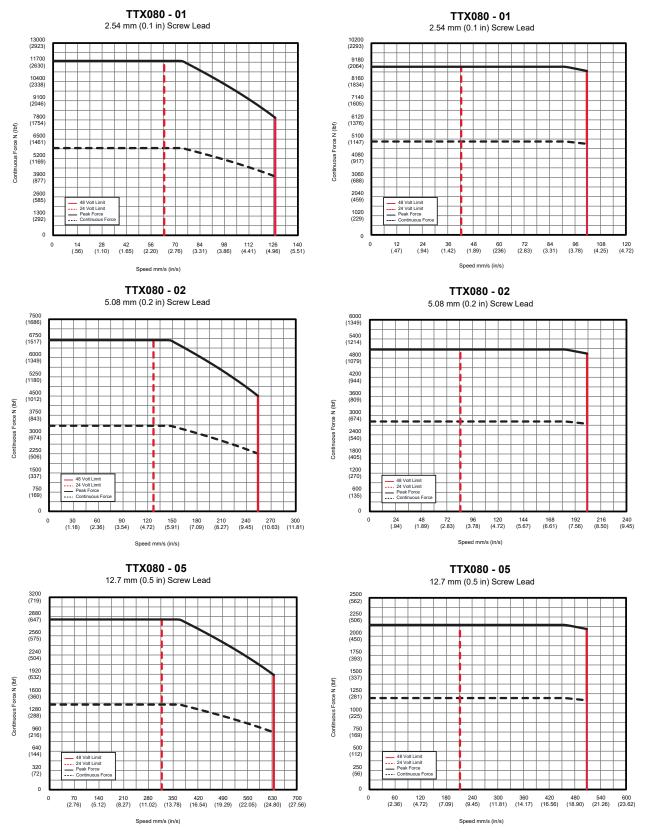


*Test data derived using NEMA recommended aluminum heatsink 10" x 10" x 3/8" at 25 °C ambient.



Tritex TTX Dimensions

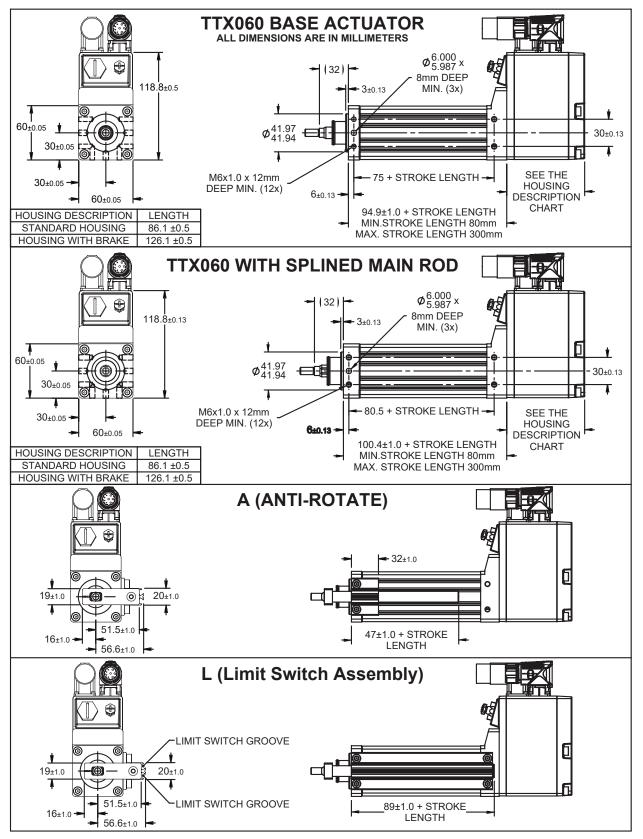


EXLAR

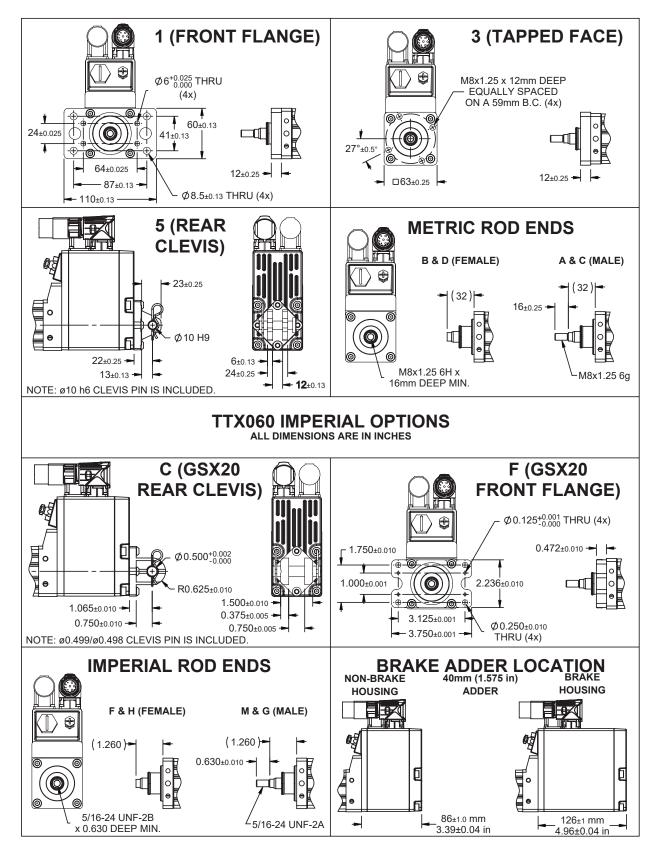



Pre-sale drawings and models are representative and are subject to change. Visit exlar.com to download a 3D model of your desired configuration.




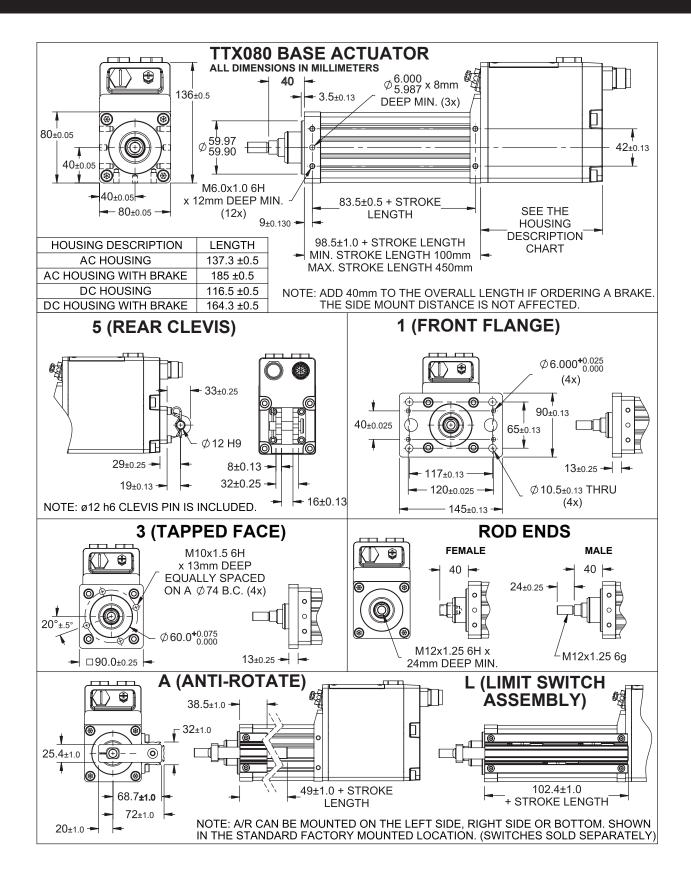

EXLAP

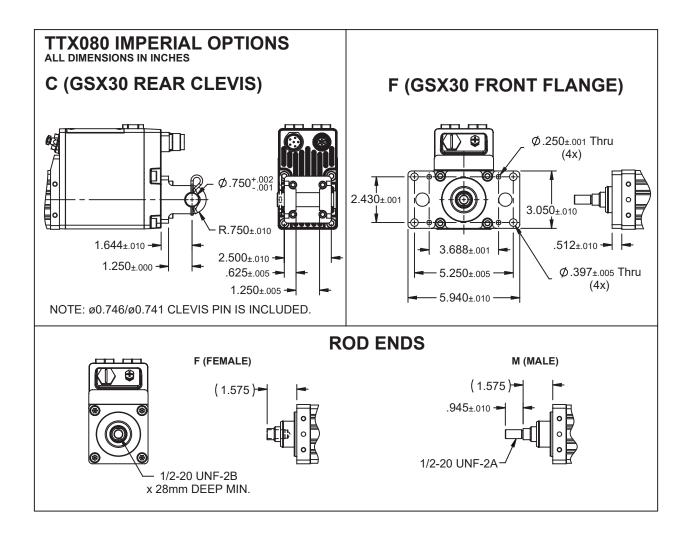

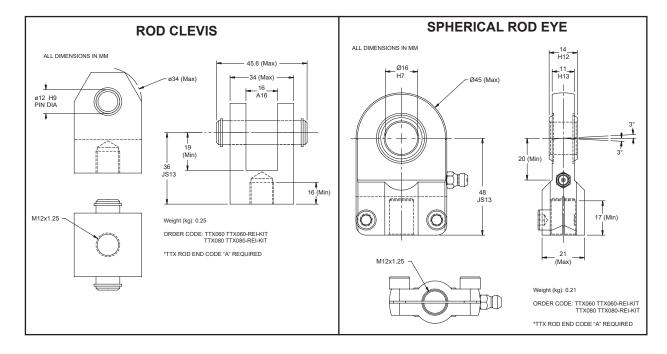





Tritex TTX Cables and Accessories

TTX Series Cables & Accessories	Part No.
"I" Connection	
Power cables, molded M23 style connector, 8 pin, xxx = length in feet. Standard lengths 15, 25, 50 feet (DC Stator)	CBL-TTIPC-SMI-xxx
Power cable with M23 6 pin xxx = Length in feet, std lengths 15, 25, 50, 75, 100 (AC Stator)	CBL-T2IPC-SMI-xxx
I/O cables, molded M23 style connector, 19 pin, xx = length in feet. Standard lengths 15, 25, 50 feet	CBL-TTIOC-SMI-xxx
Communications Accessories - RECOMMENDED PC COMMUNCIATIONS CABLE	
PC to TTX Communications cable-USB/RS485 to M8 connector, 6 feet	CBL-T2USB485-M8-006
PC to TTX Communications cable-USB/RS485 to M8 connector, 15 feet	CBL-T2USB485-M8-015
Multi-Drop RS485 Accessories	
RS485 splitter - M8 Pin plug to double M8 Socket receptacle	TT485SP
Multidrop Communications Cable for use with TT485SP, 6 feet	CBL-TTDAS-006
Multidrop Communications Cable for use with TT485SP, 15 feet	CBL-TTDAS-015
Multi-Purpose Communications Accessories	
Communication cable, PICO type connector, 4 pin, xxx = length in meters, Standard lengths 4.572, 7.62, 15.24 meters	CBL-TTCOM-xxx



CBL-T2USB485-M8-006 or 015 Our recommended communications cable. No special drivers or setup required for use with MS Windows™.



CBL-TTIOC-SMI-xxx



CBL-TTIPC-SMI-xxx / CBL-T2IPC-SMI-xxx



CBL-TTDAS-006 or 015 For use with TT485SP for multi-drop applications.




CBL-TTCOM-xxx Use with CBL-T2USB485-xxx for long cable runs.



TT485SP RS485 communications splitter. Use to daisy-chainmultiple TTX actuators.



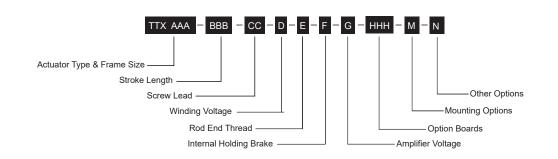

Actuator Type

TTX = Intelligent Drive / Motor / Actuator

AAA = Actuator Frame Size

060 = 60 mm (2.36 in) 080 = 80 mm (3.15 in)

BBB = Stroke Length

080 = 80 mm - TTX060 only 100 = 100 mm - TTX080 only 150 = 150 mm 300 = 300 mm 450 = 450 mm - TTX080 only

CC =Screw Lead

 $\begin{array}{l} 01 = \ 2.54 \mbox{ mm} \ (0.1 \mbox{ in}) \\ 02 = \ 5.08 \mbox{ mm} \ (0.2 \mbox{ in}) \\ 04 = \ 10.2 \mbox{ mm} \ (0.4 \mbox{ in}) \mbox{ - } \mbox{TTX060 only} \\ 05 = \ 12.7 \mbox{ mm} \ (0.5 \mbox{ in}) \mbox{ - } \mbox{TTX080 only} \end{array}$

D = Winding Voltage

4 = 230 Vac Max - TTX080 only D = 48 Vdc Max

E = Rod End Thread

- A = Male Metric B = Female Metric²
- $C = Male Metric, Splined^2$
- D = Female Metric, Splined²
- F = Female Standard²
- G = Male Standard, Splined²
- H = Female Standard, Splined²
- L = Female Metric, 17-4 Stainless²
- M = Male Standard²
- R = Male Metric, 17-4 Stainless²
- V = Female Standard, 17-4 Stainless²
- W = Male Standard, 17-4 Stainless²

F = Internal Holding Brake



B = Internal Holding Brake, Electrically Released

G = Amplifier Voltage

A = 230 Vac 1-ph Max Input - TTX080 only D = 48 Vdc Max Input

HHH = Option Boards

SIO = Standard I/O Interconnect IA4 = 4-20 mA Analog I/O EIP = SIO plus EtherNet/IP w/M12 connector PIO = SIO plus PROFINET IO w/M12 connector TCP = SIO plus Modbus TCP w/M12 connector

M = Mounting Options

- N = None
- 1 = Front Flange, Metric
- 3 = Tapped Face, Metric 5 = Rear Clevis, Metric
- F = Front Flange, Standard²
- C = Rear Clevis, Standard²

N = Accessory Options

N = None A = Anti-Rotate Assembly L = Limit Switch Housing / Anti-Rotate Assembly¹

¹Switches sold separately ²Available option. May add lead time.



For options or specials not listed above or for extended temperature operation, please contact Exlar

EXLAP

Warranty and Limitations of Liability

WARRANTY AND LIMITATION OF LIABILITY: Please see our warranty on our website here: <u>Division</u> <u>Policies | About | Actuation Division | Curtiss-Wright Actuation Group (cw-actuation.com)</u> for details.



USA & CANADA

Exlar Automation 18400 West 77th Street Chanhassen, MN 55317 Phone: 855-620-6200 (US & Canada) Fax: 952-368-4877

ASIA

Exlar Asia Pacific 1007 Pine City Hotel 8 Dong An Road, Xuhui District Shanghai 200032 China Phone: +86 021-6495-7868

Distributed by:



www.exlar.com

Exlar[®] actuators are a brand of Curtiss-Wright, Actuation Division.